

SOLO Wings

Description

The SOLO WINGS are an important element of the SOLO SYSTEM. With a matching half-ellipse shape, they are perfect terminations for SOLO configurations. They also provide extra storage space inside the Tensaflex. Available in two heights:

- SOLO Wing 500 20", 10 lbs.
- SOLO Wing 700 27 ½ ", 12 lbs.

Parts and Features

SOLO Wings

Tensaflex (C)	(47" long)
Cover (B)	
Round	(22" x 16" x 1")
Square	(25" x 17" x 1")
Base (A)	(21" x 12" x 1")



Accessories

- Connectivity: The Wings can be combined with almost all SOLO models except for:
 - SOLO Dress and SOLO Market (due to their height)
 - SOLO Light and SOLO Glass Counter (These two units can not be connected with Velcro)

Packing

- Shipped in one corrugated box.
 - Wing 500 Dimensions: 25" x 21" x 6". 13 lbs
 - Wing 700 Dimensions: 29" x 21" x 6". 16 lbs
- Optional carry-bags available, packs up to two SOLO Wing per bag (Item # 85100). Could also be packed in the same bag together with a SOLO Standard.

SOLO Wings

Instructions

Step 1

Situate the base (A) at the desired location, stretch out the Tensaflex and place it according to the guiding dots. Notice the arrows for proper vertical direction.

Step 2

Put together the Velcro on the base (A) with that on the Tensaflex (C), leave both ends loose.

Step 3

Place cover (B) starting with the guiding dots, firmly pressing the two shells of Velcro against each other. Adjust the Tensaflex so that all the Velcro lines are securely fastened.

CONNECTION

Step 4

Locate the Wing's base (A) besides the SOLO Standard. Connect the Wing to the SOLO Standard fastening its ends to the SOLO Standard's Tensaflex.


Note:

To dismantle follow the same steps in reverse order.

To prevent damages to the fabric of the SOLO to which the Wing is connected, slowly tear the Wing's Tensaflex in a perpendicular direction, never sideways.




Step 1

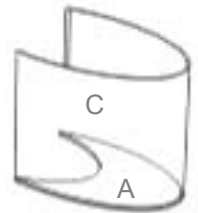

Step 2



Step 3

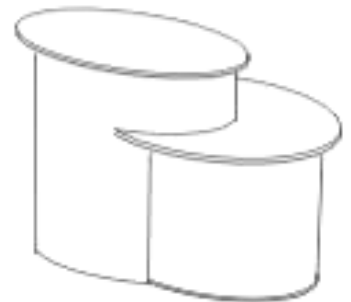

Step 4