

Instructions For:

# Preprinted Flying Banners




## Product Specifications

Use of Preprinted Flying Banners requires the separate purchase of a 10' Messenger Flying Banner Display.  
Foot Print Dimensions: 33" W x 33" D


### Product Parts (10' Messenger Flying Banner Display)

- 1 - Shock-Cord Poles
- 2 - Hook
- 3 - Top Pole
- 4 - Pole Cap
- 5 - Standard Base
- 6 - Ballast Bag
- 7 - Base Insert

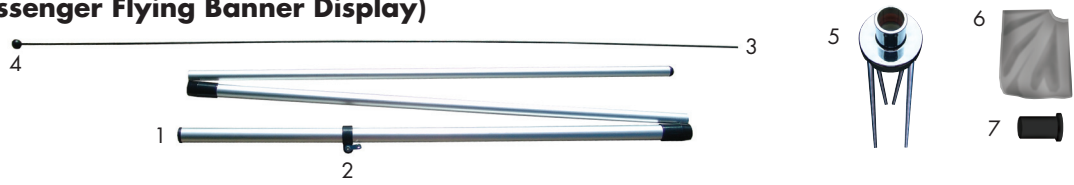

### Product Parts (Preprinted Flying Banner)

- Preprinted Flying Banner:
- A - Old Glory
  - B - Sale
  - C - Open
- 8 - Pole Pocket Hole

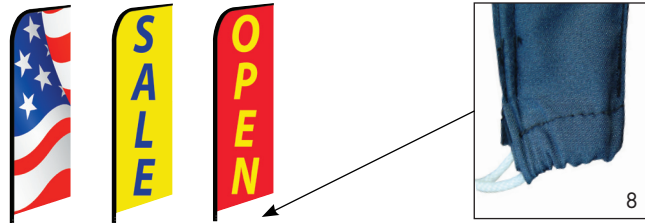

### Step 1

Take all parts out of the bag.



 
### Step 2

Spread the legs of the Standard Base (5) and place the Base Insert (7) in the hole on the top of the Base. Be sure to fill the Ballast Bag (6) with water or sand and place it over the center of the base.



### Step 3

Assemble the Shock-Cord Poles (1).



Place Top Pole (3) in the top of the Shock-Cord Poles (1).



Place the Pole Cap (4) on the end of the Top Pole (3).



### Step 4

Place the Pole Cap end of the assembled Pole (1 & 3) into the Pole Pocket Hole (8) of the Flying Banner. Slowly feed the Pole into the Banner until the Pole Cap (4) comes to the top end. Guide the Pole Cap (4) into the reinforced area at the top end of the Flying Banner and be sure that it is all the way in.



### Step 5

Pull on the Pull Cords around the Pole Pocket Hole (8) at the bottom of the Flying Banner. The Top of the Pole will bend as the Banner is pulled into place. Tie the Pull Cords securely to the Hook (2) on the bottom of the Shock-Cord Poles.

Place the bottom of the Pole (1) into the Base Insert (7) on the top of the Base (5) and push until snug.

