


Item #	Product	Viewable Graphic Size
254272	8' KIT	96"w x 89.5"h
254273	8' Hardware	N/A
254274	8' Graphic only	96"w x 89.5"h
254275	10' KIT	119.5"w x 90.5"h
254276	10' Hardware	N/A
254277	10' Graphic only	119.5"w x 90.5"h

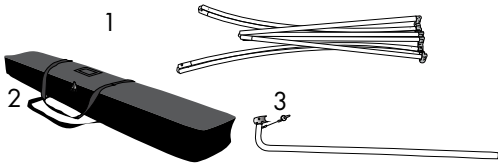

## Product Parts for HARDWARE

 
- 1 - Frame
- 2 - Soft Case
- 3 - Leg (x2)



**ALL PARTS COME  
IN THE KIT**

## Product Parts for FABRIC GRAPHIC (skip to STEP 7 )

- 4 - Fabric Graphic




## Display Set-Up

### Step 1

Remove all parts from the case and place on a clean flat surface.


The Frame (1) is all connected. The corners expand and pivot. All other joints are shock-corded.

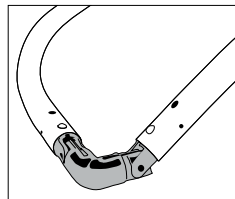


CORNER DETAIL VIEW

### Step 2

Open the Frame (1) by pulling up two of the corners and lay them flat on the ground opposite the other two corners as shown in Step 3.

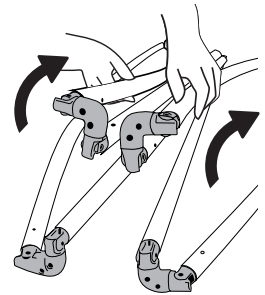


### Step 3

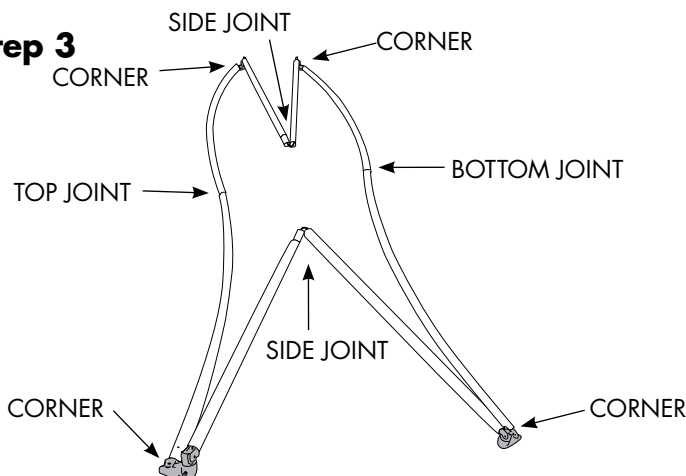

### Step 4

Lock the Corners by pressing the snap release button and push each pole toward the corner. Lock into place by releasing snap button when it lines up with the hole.

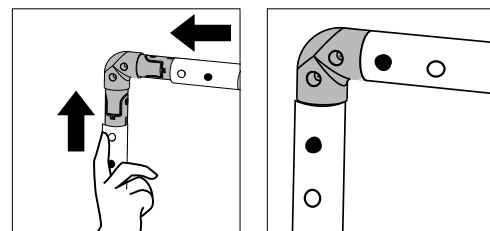


**LOCKED**

## Display Set-Up Continued...


### Step 5

Next, secure the side pole joints by placing the tapered end of one pole into the large end of the next while pressing the button snap. Repeat the same for the top and bottom joints.

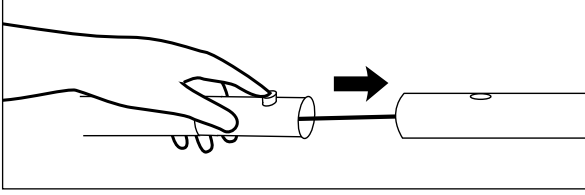


### Step 6

With Frame (1) assembled on the floor, establish which end is the top by looking at the side poles. The side poles have an inner hole 52" up from the bottom (closer to the top)

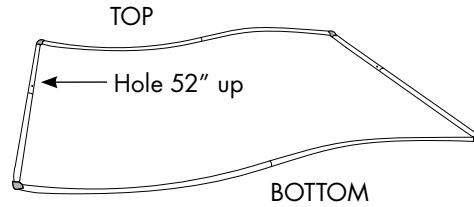


### Step 7

Verify the zipper at the bottom of the Fabric Graphic (4) is open and slide the Fabric Graphic (4) over the top and pull down zipping shut at bottom.

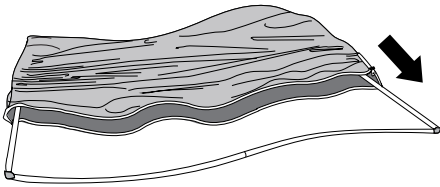


### Step 8

The backside of the Fabric Graphic (4) has 2 cutouts to allow access to the framework. Secure the Legs (3) to each side through these cutouts (as shown in step 9).

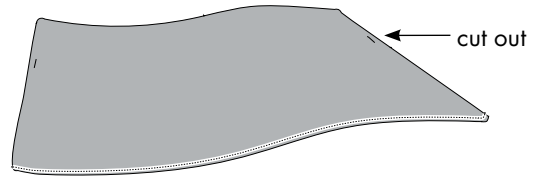


### Step 9

Line up the hole on the Leg (3) with the hole 52" up from the bottom of the side pole. Lock into place by inserting and pushing in the locking pin.

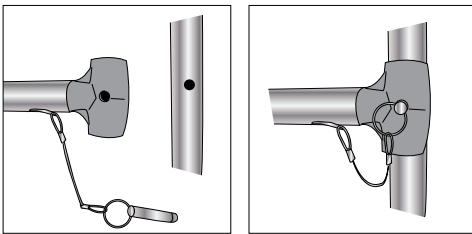

### Step 10


The display is now ready to stand and be displayed.

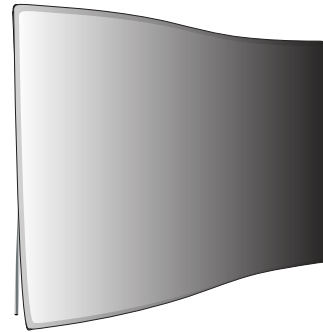

## Disassembly Instructions


### Step 1

Make sure floor in front of display is clean and free from debris. Lay unit on the floor and remove the kick stand legs, by reversing Step 9 in assembly instructions.

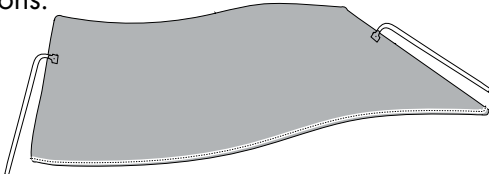

### Step 2


Unzip the Fabric Graphic (4) and remove from Frame.

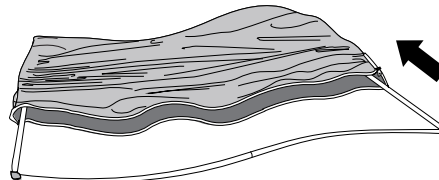

## Disassembly Continued...


### Step 3

Open all push button locked joints (side, top and bottom). Push on snap release button and pull poles apart. If you feel resistance, twist the pole as you pull.

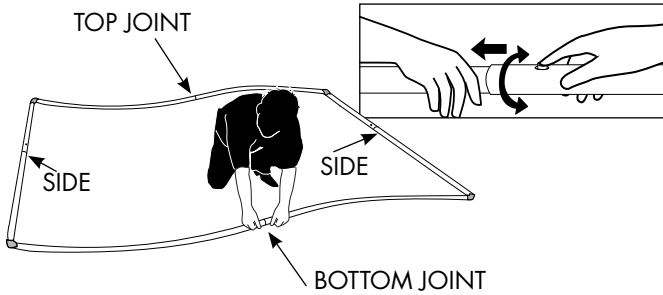


### Step 5

Make sure all joints are now in open position.

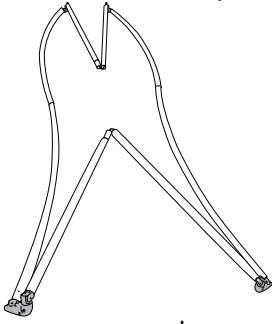


### Step 7

Unit will fold into a compact shape.

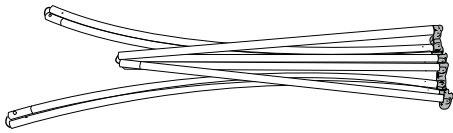


### Step 4

Unlock both poles that are attached to the corner joints by pushing on snap release button and pulling the poles away from the corner.

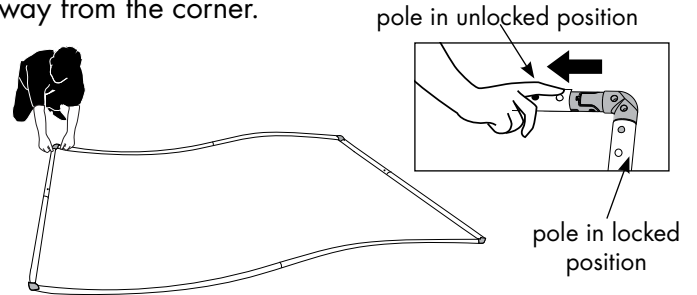


### Step 6

Grab 2 corners at the same end and fold Frame (1) up and over to meet the other 2 corners.

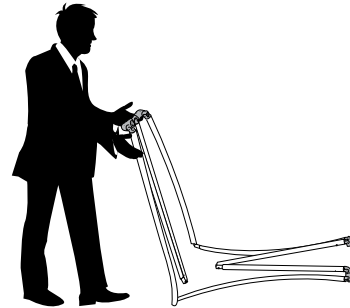

## Storage

 Place all product parts into Soft Carry Case (2) and store in a cool dry location.



## Care

Recommended for indoor use only.

Machine wash on gentle cycle using mild detergent. Line Dry. Do NOT dry clean, Do NOT Iron.