

Setup Instructions:



Place tripod on flat, level surface. Extend tripod leg housing down approximately 12" from starting position to create a wide, stable base. The leg with Frameworks logo should be positioned forward so it will be directly under the TV display.



With the center tube in the down position, attach the TV Mount and fully tighten the main star knob.

(Not Shown) Attach VESA Mount to TV according to the TV Manufacturer's guidelines.

NOTE: Max TV screen size is 48"





Attach VESA Mount to TV Mount Assembly until it CLICKS into place. Fully tighten the small knob on the VESA Mount to complete the TV attachment. Adjust the forward pitch of the mount to the desired angle, and fully tighten the knob.

NOTE: Shown without TV attached



With the TV mounted, adjust to the desired screen height.

Finally, check that all knobs are securely tightened.

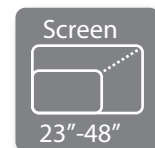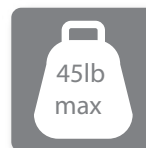

- It is recommended to use tripod weights if using with a screen larger than 32 inches.

- Do not use in a windy environment or place on an uneven surface.