

# Tripod Banner Display

210064, 210044, 210191, 210193  
210063, 210025, 210192, 210194

Scan to view Product Instructional Video or visit:  
<http://www.creativedisplaysite.com/Tripod.html>



## Product Parts

- 1 - Tripod Base
- 2 - Arms



## Display Set-Up

### Step 1


Remove all parts from the bag and place on a clean flat surface.



Expand the Tripod Base (1) by gently pulling the legs out until it can stand on its own.

### Step 2

Insert the Arms (2) into the Tripod Base (1).

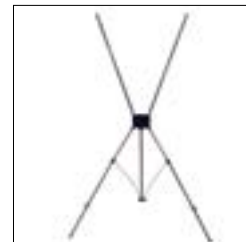

### Step 3

Attach the banner by placing the Arm (2) hooks through the grommet holes at the top of the banner. Gently pull the banner down to hook the lower banner grommets to the base Leg hooks.



### Note:

The Tripod Display is designed to bend and when properly installed, the Banner will pull taut and the Arms will arch. However, if a banner is different than the recommended size is installed, it may cause permanent failure of the display. See graphic templates on-line for recommended sizes.



## Storage

Place all product parts into drawstring pouch and store in a cool dry location.



## Care

To clean, wipe with damp cloth.