

Ultimate LED Double Light Kit

Multiple Product Use

Product Parts

- 1 - Light Head (x2)
- 2 - Hex Wrench
- 3 - 5 x 16mm Hex Screw (x2)
- 4 - 5 x 30mm Hex Screw (x2)
- 5 - Nylon Lock Nut (x4)
- 6 - 8mm Wrench
- 7 - Horizontal Adapter Bracket (x2)
- 8 - Quick Release Pin (x2)
- 9 - Light Support Mount (x2)
- 10 - Clamp (x2)
- 11 - USB Adapter
- 12 - Light Adapter For Show N' Rise, Splash & Deluxe Geo Frames



Product Set-Up

Step 1

Begin by removing all parts from case and place on a clean, flat surface.

Step 2b

If the clamp (10) will be used on a horizontal pole, install the Light Support Mount (9) to the Horizontal Adapter Bracket (7) using the M5 x 16mm screw (3) and M5 Nylon Lock Nut (5). The provided Hex Key (2) and 8mm Wrench (6) can be used to tighten the screw and nut.



Step 3

Install the clamp assembly by loosening the thumb screw while spreading the jaws open until it fits over the pole that the clamp (10) is being installed on. Once the clamp (10) fits over the pole, begin tightening the clamp (10) in the desired orientation.



Step 5

Route the wiring down the back of the display to a location near the power source.



Step 6

Plug the provided USB adapter (11) into the power source, then plug the USB cable from the light into the USB adapter (11). The lights should illuminate.

Step 2a

If the clamp (10) will be used on a vertical pole, install the Light Support Mount (9) directly to the Clamp (10) using the M5 x 30mm Screw (4) and M5 Nylon Lock Nut (5). The provided Hex Key (2) can be used to tighten the screw. Do not over tighten.



Step 2b cont..

Attach this assembly to the clamp (10) using the M5 x 30mm screw (3) and M5 Nylon Lock Nut (5). The provided hex key can be used to tighten the screw. Do not over tighten.



Step 4

Once the clamp assembly is firmly in place on the display, install the Light Head (1) unit by inserting the provided quick release pin (8).



Repeat steps 1 through 5 for the second light assembly..

Universal Light Adapter for Pop-Ups

Insert the Light Fixture into the adapter (12) and align the holes. Insert the quick release pin (8). Slide the adapter over the light clip on top of the frame.



Storage & Care

Place all product parts into carry case and store in a cool, dry location. To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.