

# Double Premium Boulevard Bracket System

302061


## Product Specifications

Graphic sizes will vary - Do not Exceed 24 square feet


Graphic Finishing: 3" Top and Bottom Pole Pockets with #2 Grommets

## Product Parts

- 1 - Casting (x4)
- 2 - Fiberglass Pole w/Sleeves (x4)
- 3 - 40" Stainless Steel Bands (x4)
- 4 - Large Pin (x4)
- 5 - Small Pin (x4)
- 6 - Screws (x8)
- 7 - Large Washer (x4)
- 8 - Small Washer (x8)

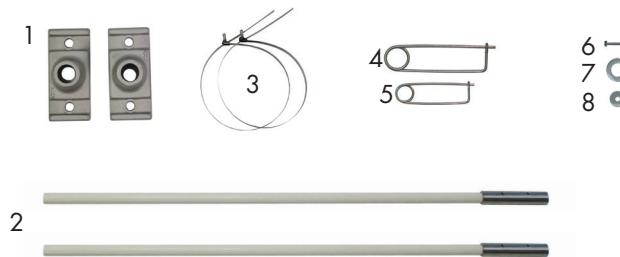

\*Screw/nut driver will be needed for setup

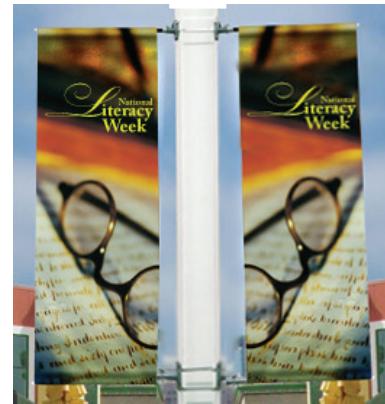

## Set-Up

### Step 1


Attach the top Castings (1) to pole. Be sure the arrow is facing up - away from the banner and the castings are lined up on opposite sides of the pole.

Place Screws (6) with a Small Washer (8) in the top & bottom holes and drill into place. Depending on the kind of pole - you may need to pre-drill the holes.



### Step 2

Secure the Castings (1) to a round Pole with two Stainless Steel bands (3). If attaching to a square or other shaped pole, it is recommended to use an additional set of bands. Available separately. Tighten the bands until they hold the brackets securely and lock it into place with a screw or nut driver. Be sure the Band head is on the flat side of the pole or any edge or corner of pole and not on the casting. Clip off any excess band length.

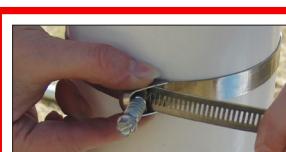

**DO NOT use a power tool to tighten the stainless steel bands! Over tightening will cause damage.**  
**Installation section: Do not over tighten the bands. Do not exceed 30 IN pounds of torque.**



### Step 3

Insert the end of the Fiberglass Pole w/Sleeves (2) into the top Castings (1) Image A. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) Image B.


Before closing the Small Pin (5) attach the Large Pin (4) onto the Small Pin (5) as shown in Image C.



\*Pin should clip below casting

### Step 4

Slide a Large Washer (7) onto the Fiberglass Pole w/Sleeves (2). This will keep your banners from sliding up the arm.

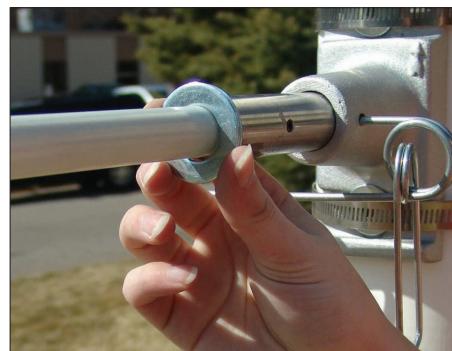

Instructions Continued On Back Side

## Step 5

Measure your banners for correct placement of the lower Castings (1) so they fit your boulevard banners properly.

Repeat Step 1 & 2 to attach the Lower Castings (1).  
Be sure the arrow is facing down - away from the banner.



Note: On the  
Bottom Casting  
the arrow is facing  
away from banner

## Step 7

Slide the Large Washer (7) onto the Fiberglass Pole w/Sleeves (2). This will keep your banners from sliding up the arm.



## Step 6

Insert the end of the other Fiberglass Pole w/Sleeves (2) into the lower Castings (1) Image A. Line up the holes in the arm to the holes on the side of the Casting and secure by inserting the Small Pin (5) Image B.

Before closing the Small Pin (5) attach the Large Pin (4) onto the Small Pin (5) as shown in Image C.



\*Pin should clip above casting

## Step 8

Slide your banners onto the Fiberglass Pole w/Sleeves (2). Secure the top and bottom of the banners by pinning the Large Pin (4) through the banner's grommets.

